


OPERATION PANEL INSTRUCTION

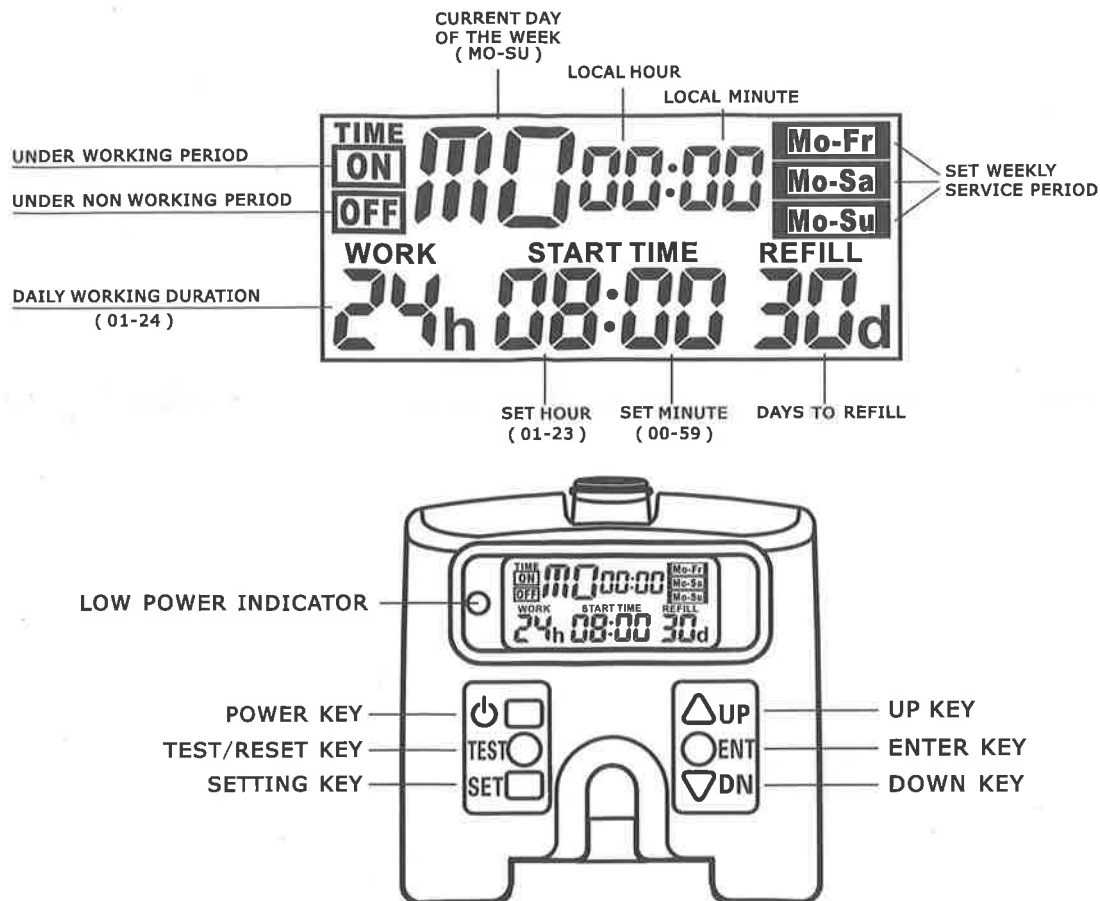

1. Open the cover and load the batteries, the power must be turned off before loading the refill.
2. Ensure the spray hole is not exposed to the face, press to turn on the power, then the LCD panel is activated, and the default setting is: **MO 00:00** **Mo-Su** **WORK 24h** **START TIME 08:00** **REFILL 30d**
3. Press **TEST**, the dispenser would spray one time, and if keep pressing for over 5 seconds, the spray-times-counter would be RESET to zero automatically.
4. Press **SET** to program the dispenser.
 - Press to set local day of the week (MO-TU-WE-TH-FR-SA-SU), press **ENTER** to the next setting.
 - Press to set local hour, press **ENTER** to the next setting.
 - Press to set local minute, press **ENTER** to the next setting.
 - Press to set the weekly service period **Mo-Fr** **Mo-Sa** **Mo-Su**, press **ENTER** to the next setting.
 - Press to set the daily working hour duration from 00 to 24 hours, press **ENTER** to the next setting.
 - press to change the daily start working time by hour from 08, press **ENTER** to the next setting.
 - press to change the daily start working time by minute from 00 to 59, press **ENTER** to the next setting.
 - press to set the Days to Refill to be 30, 45, 60 or 90 days, press **ENTER** to finish the whole setting.
5. While the setting is finished, the dispenser would calculate the spray interval based on a 3000 times refill automatically, it would spray in the working period according to setting and stop working in the non-working period automatically.
6. After setting, Days to Refill counter would be descending from 30/45/60/90 to 00 day by day, once it's 00, the digit 00 would be blinking to remind user of replacing with new refill, after the replacement is done, press **TEST** for over 5 seconds to reset the Days to Refill counter to be 30/45/60/90 according to your selection.
7. When the voltage of the batteries is lower than 2.4volt, the LOW POWER INDICATOR would flash in red every 3 seconds to remind of changing the batteries, when the voltage is over 2.4v, the indicator would stop flashing.
8. **ON**: it means the dispenser is under working period.
OFF: it means the dispenser is under non-working period.